


# Peugeot 407

Year:2004-;

V: 1.8; 2.0

VIN:-

TYPE :17.644

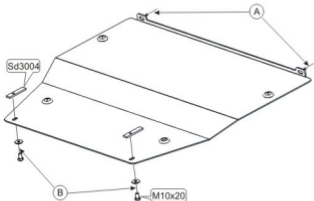

1. Take off the regular plastic duster (if it is installed on the car).
2. Fix strap SD 3004 to the front axle beam apertures.
3. Loosen lower bolts located on the flange of the longeron and fix the front part of the skid plate under them (A).
4. Fix the rear part of the skid plate to mounted straps with bolts M 10x20 (B).
5. Tighten all screw joints.

