


Renault Kangoo

Year:2001-;

V: 1.5; 1.8

VIN:-VF1KC0VBF24000000

TYPE :18.491

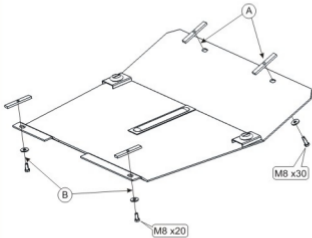

1. Disassemble the skid plate to component parts.
2. Fix straps to the car frame apertures.
3. Fix the skid plate to mounted straps with bolts M 8x20, M 8x30 (A), (B).
4. Tighten all screw joints.



2 x M 8x20
2 x M 8x30



4 x 8



4 x 90x15x45 -SD3006