


# Renault Scenic II / Kangoo/ Meganne II

Year.: 2005 -;

Vol: all

VIN:-

Type: 18.778

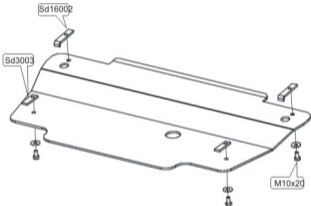

1. Disassemble the skid plate to component parts.
2. Fix straps to the car frame apertures.
3. Fix the skid plate to mounted straps with bolts M 8x20 (A), (B).
4. Tighten all screw joints.

