


Renault Koleos

Bj. 2008 -

18.1218

18.1353

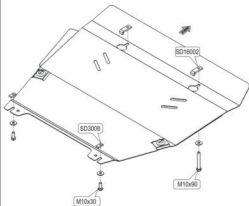

1. Fix threaded inserts over apertures in the rear part of the car frame and screw bolts into them.
2. Fix threaded inserts with bolts through apertures in the front part of the car frame.
3. Put the skid plate on the four fixing points (bolts).
4. Tighten all screw joints.



2 x Threaded insert
-SD 16002



2 x Threaded insert
-SD 3008



2 x M 10x30
2 x M 10x90



4 x 10