


# Skoda Fabia

Year:2000-;

V: 1.4; 1.6;

TYPE :21.267

VIN:-

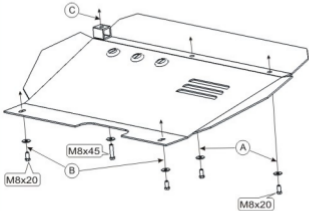

1. Take of the plastic duster (if it is installed on the car).
2. Fix the skid plate to regular apertures in the car frame with bolts M 8x20 (A), (B).
3. Fix the bolt through spacer in point (C).
4. Tighten all screw joints.

