


Subaru Forester

Year:2003-;

Vol: 2,0;

TYPE : **22.0567**

VIN:-

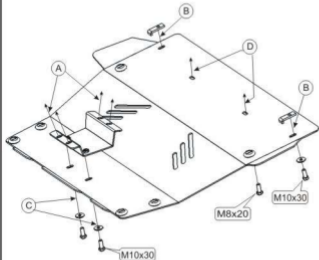

1. Disassemble the skid plate to component parts.
2. Take off plastic dust guard (if it is installed on the car).
3. Loosen bolts located on the front axle beam and take off dust guard fastener.
4. Fix the skid plate's corbel with regular bolts (instead of dust guard fastener) (A).
5. Fix straps to the car frame apertures.
6. Fix the front part of the skid plate to mounted straps with bolts M 10x30 (B).
7. Fix the rear part of the skid plate to installed corbel with bolts M 10x30 (C).
8. Additionally, fix the skid plate to the radiator beam with bolts M 8x20 (D).
9. Tighten all screw joints.



2 x Strap



1 x skid plate's corbel



2 x M 8x20
4 x M 10x30



2 x 8
4 x 10