

Suzuki Wagon R


Body: Years.:1998-; V: 1,3;
VIN:- TSMMA53S00102006 TYPE :23.608



M8x16



M8x16

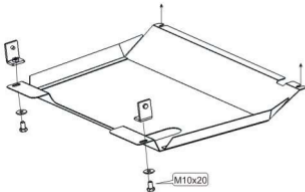

M10x20

1. Disassemble the skid plate to component parts.
2. Loosen on bolts on each stabilizer's fastener.
3. Fix corbels to load-bearing element of the steering rods fastener with bolts M 8x16.
4. Put the front part of the skid plate under loosened bolts and fix to mounted corbels in rear with M 10x20.
5. Tighten all screw joints.



2 x M 8x16
2 x M 10x20



2 x 8
2 x 10



2 x Corbel