

# Land Cruiser 90 J9


Body: J9

Years.: 2005- ;

V: 3.0 TD

VIN:-

Type: 24.867

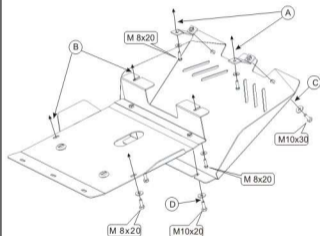

1. Remove regular dust guard.
2. Disassemble the skid plate to component parts.
3. Fix corbels to the beam located in front of the radiator with bolts M 8x20 -(A).
3. Fix the rear part of the skid plate to regular apertures in the car body (B).
4. Fix the front part of the skid plate to mounted elements in points (C) and (D).
5. Tighten all screw joints.

