

Land Cruiser 90 J9

- skid plate for transmission case
and transfer box


Body: J9

Year.: 1996-2001-;

V: 3,0 TD

VIN:-

Type: 24.868

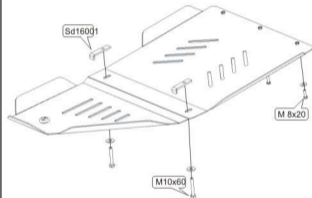

1. Install the skid plate after the skid plate for engine bay is mounted.
2. Fix the skid plate to already mounted skid plate for engine bay with bolts M 8x20.
3. Fix straps Sd16001 over transfer box supporting beam. Fix the skid plate to already mounted straps with bolts M 10x60.
4. Tighten all screw joints.

