


# Volvo S80

Year: 2001-2004 ;

V: all;

TYPE :25.475

VIN:-

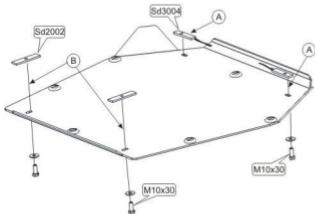

1. Disassemble the skid plate to component parts.
2. Fix straps SD 3004 to the front part of the car frame.
3. Fix straps SD 2002 to the rear part of the car frame.
4. Fix the skid plate to mounted straps with bolts M 10x30 (A), (B).
5. Tighten all screw joints.



4 x M 10x30



4 x 10



2 x  
2 x

90x60x20 -SD3004  
100x25x50 -Sd2002