


Volvo S60,S80

Body: Years.:2002-; V: all 5 cylinders' engines
VIN:- TYPE :25.647

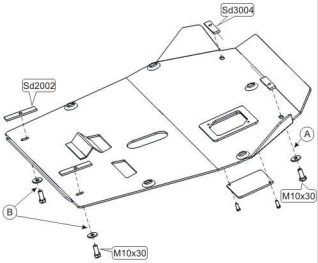

1. Remove regular plastic dust guard and disassemble the skid plate to component parts.
2. Fix straps Sd3004 into apertures in the front part of the car frame.
3. Fix straps Sd2002 to the rear part of the car frame.
4. Fix the skid plate to mounted straps with bolts M 10x30 - (A),(B).
5. Tighten all screw joints.

