


Volvo XC90

Body:	Years.: 2002-;	V: all
VIN:-	AT	Steel TYPE :25.798 Aluminum TYPE :25.803

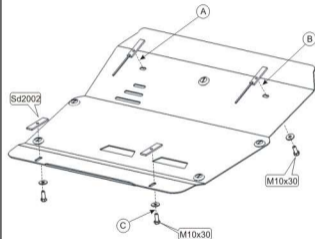

1. Remove regular plastic dust guard and disassemble the skid plate to component parts.
2. Fix special straps with tails to the front part of the car frame. At that fix straps through the central aperture in the car frame.(A),(B).
3. Fix straps into apertures in the rear part of the car frame. -(C).
4. Fix the skid plate to mounted elements with bolts M 10x30.
5. Tighten all screw joints.

