


Volvo S80 / XC 70

Body: Years.: 2006- ; V: 2.5T, 3.2, 2.4D5
 VIN: JJ1AS565071008347 АКПП Type: 25.1028
 Type: 25.1029 AI

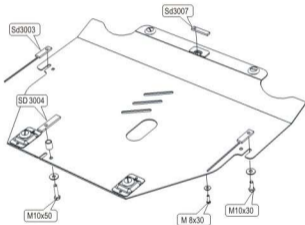

1. Remove OE plastic duster
2. Fix threaded insert to the central part of the car frame (through the car frame apertures) and slightly screw bolts in them.
3. Fix threaded insert to the rear part of the car frame. Screw bolts M 10x50 through bushing 20x25 in it.
4. Put the skid plates on mounted bolts.
5. Additionally fix the front part of the skid plate to the car frame through aperture in the skid plate.
6. Tighten all screw joints.

