


VW Caddy / Golf III / Vento

Body: Years:.....-2002; V: 1.6; 1.8
VIN:- TYPE :26.021

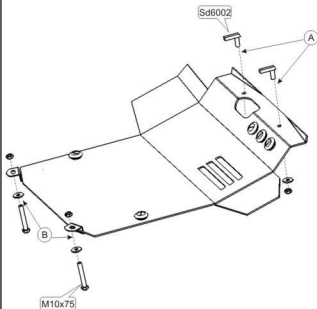

1. Disassemble the skid plate to component parts and Insert special bolts Sd6002 into apertures in the radiator's beam.
2. Fix the front part of the skid plate to mounted bolts -(A).
3. Fix the rear part of the skid plate to the front axle beam apertures -(B).
4. Tighten all screw joints.

