


VW Golf-III D / Caddy

Body: Years.:1999-; V: 1,9 D;
VIN:- TYPE :26.178

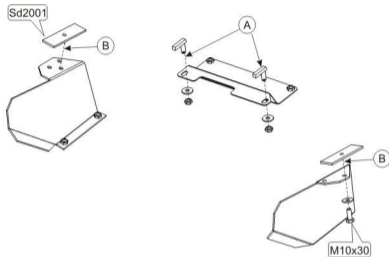

1. Disassemble the skid plate to component parts.
2. Fix the front beam of the skid plate to the car's cross bar with bolts SD6002 -(A).
3. Insert straps Sd2001 into apertures in the longeron and fix lateral protective wings to them with bolts M 10x30 -(B).
4. Fix the front part of the skid plate to mounted elements with bolts M 8x20 -(C),(E).
5. Fix the rear part of the skid plate to the front axle beam with bolts M 10x80 -(D).
6. Tighten all screw joints.

