



VW Passat B6

Body: Years.:2002 -; V: 2,5 TD - 4WD
VIN:-WUWZZZ3BZ3P000000 TYPE : 26.465

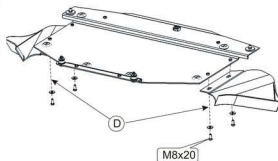

6. Fix lateral protective wings to the skid plate with bolts M 8x20.
7. Tighten all screw joints.

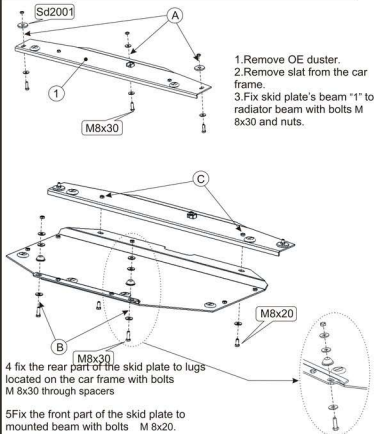