


VW T5 -skid plate for the radiator of air conditioner

Body:

VIN:-

Type: 26.775

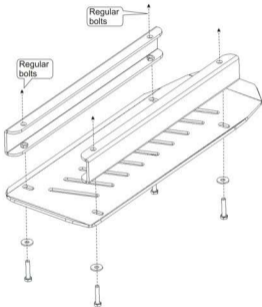

1. Disassemble the skid plate to component parts.
2. Loosen 2 regular bolts fastening radiator of air conditioner to the car body and fix special beam .
3. Repeat step "2" on the other side of the radiator..
4. Fix the skid plate to mounted elements with bolts M 8x20.
5. Tighten all screw joints.

