




VW Touareg

Bj. 2004-

Art.Nr. 26.0792 (Stahl)
26.1112 (Aluminium)

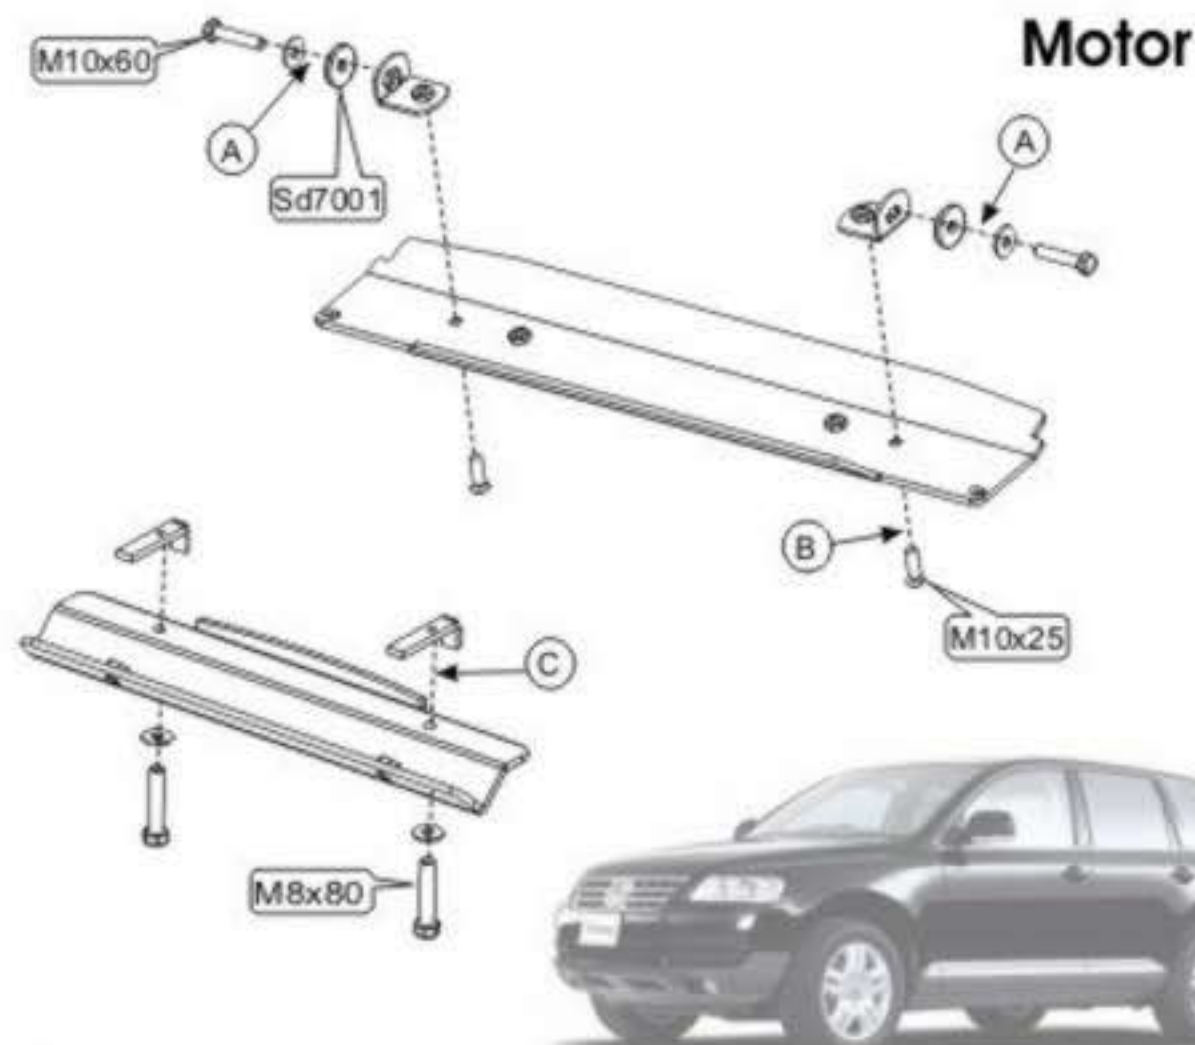

Motor

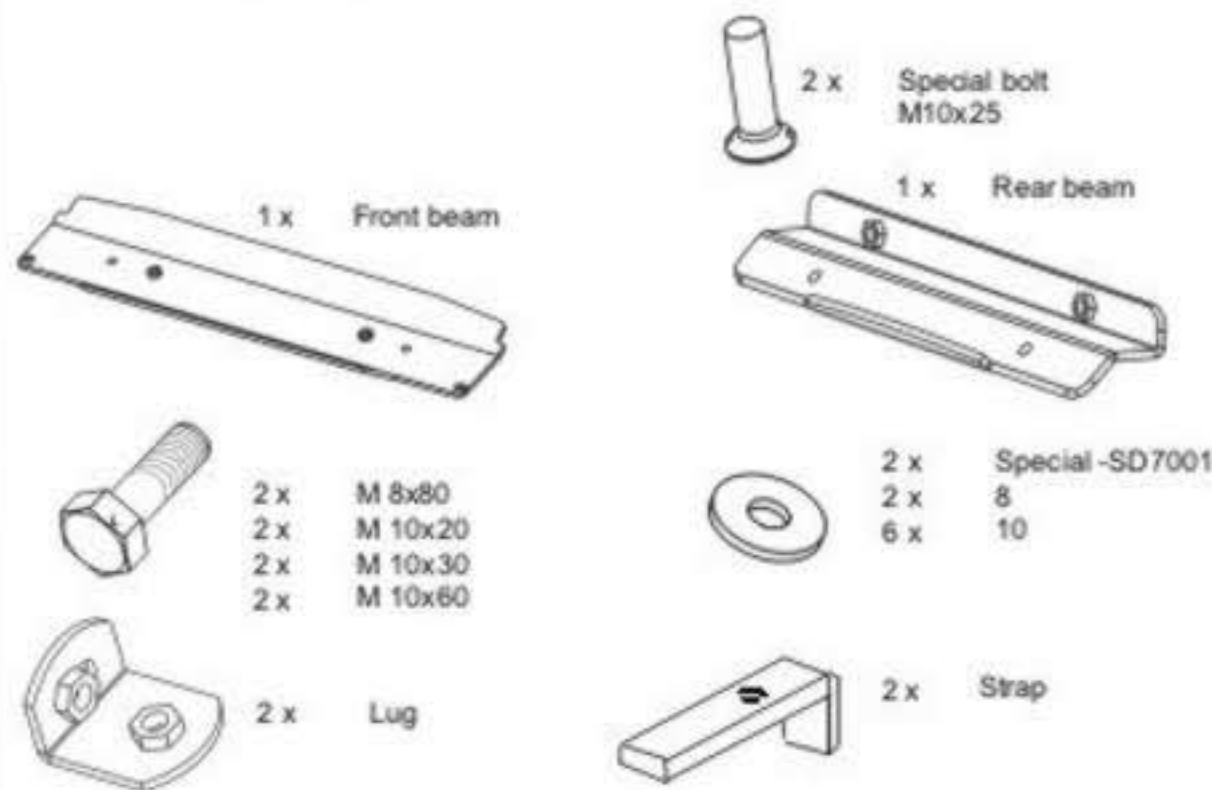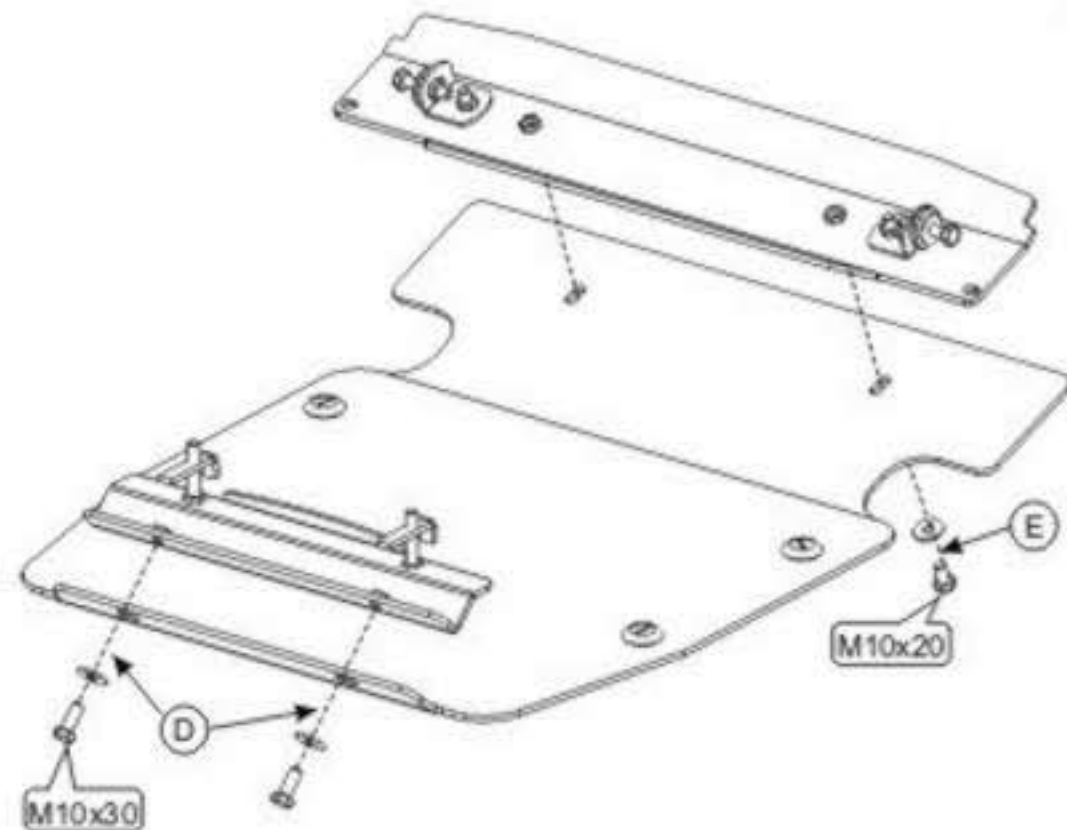

1. Remove regular plastic dust guard and disassemble the skid plate to component parts.
2. Fix skid plate's lugs to the front elements of the stabilizers' fasteners with bolts M 10x60.
3. Fix the front beam of the skid plate to mounted lugs with special Bolts.
4. Fix the rear beam of the skid plate to the car frame with bolts M 8x80 and straps.
5. Fix the skid plate to mounted elements. At that fix it in front with bolts M 10x20 and in rear with bolts M 10x30.
6. Tighten all screw joints.