


VW Touareg

Bj. 2003-

Art.Nr. 26.0880

Untersetzung

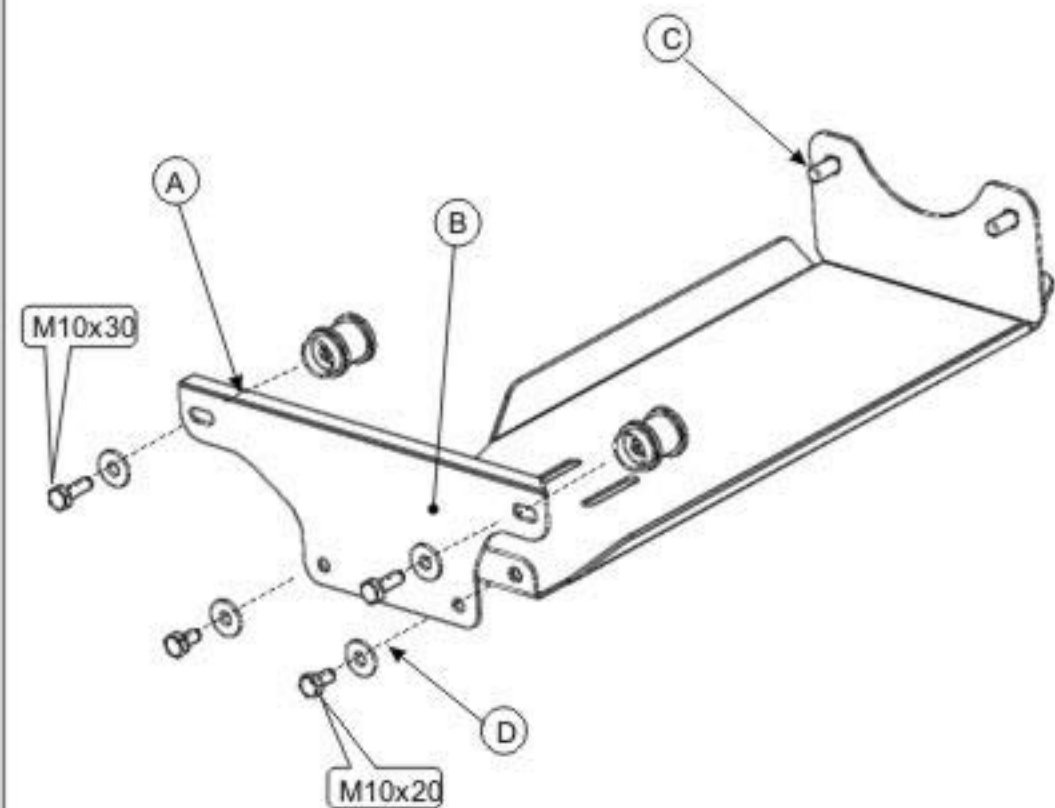

1. Disassemble the skid plate to component parts.
2. Join guiding bushes with element "B" with bolts; do not tighten bolts yet -(A).
3. Insert guiding bushes (already mounted on element "B") into apertures in the load bearing element (from the muffler's side).
4. Insert bolts into apertures in the front part of the car frame -(C).
5. Join elements of the skid plate with bolts -(D).
6. Tighten all screw joints.



Guiding bush



2 x M 10x20
2 x M 10x30

