


# Lada Niva 2121

Body: Years.:1993-2000 V: 1,6;  
VIN:- TYPE :27.151

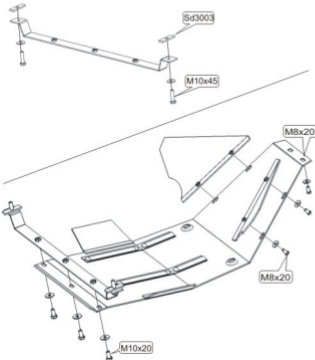

1. Disassemble the skid plate to component parts.
2. Fix straps SD3003 into longerons' apertures and mount the skid plate's beam to them.
3. Fix the front part of the skid plate to regular fixing points with bolts M 8x20.
4. Fix the rear part of the skid plate to already mounted beam with bolts M 10x20.
5. In addition mount lateral protective wings with bolts M 8x20.
6. Tighten all screw joints.



6 x M 8x20  
3 x M 10x20  
2 x M 10x45



6 x 8  
5 x 10



2 x 65x20x32 -SD2003