Fiat Brava

Year:1995-; Vol: 1,6;

VIN:- ZFA18200004300000 TYPE :7.511

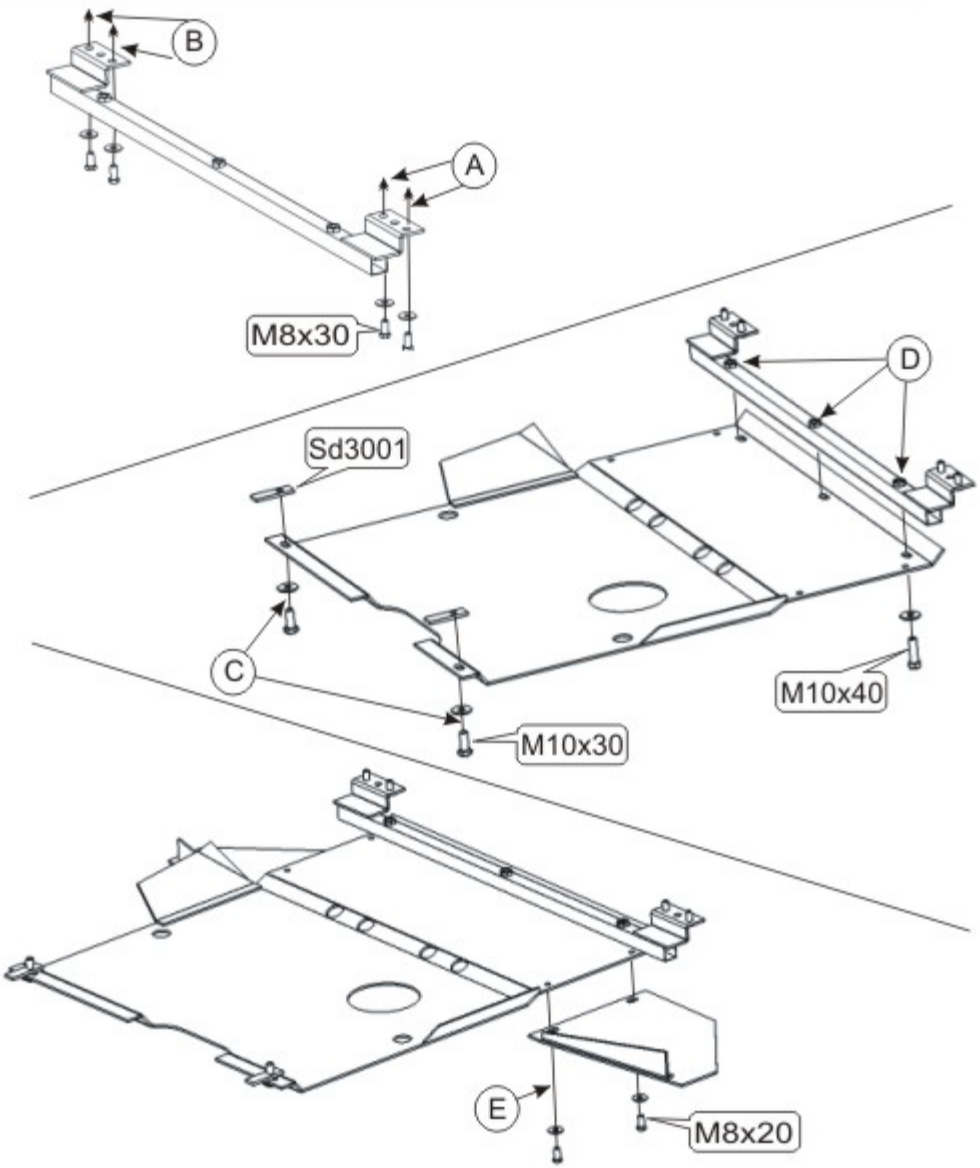

1. Disassemble the skid plate into its component parts.
2. Unscrew from one side the two bolts holding the radiator's beam and fix under them the skid plate's beam (A).
3. Repeat step 2 from the other side (B).
4. Fix the strap SD2003 to the front axle beam apertures.
5. Fix the skid plate to the already mounted beam with M 10x40 bolts (D) and in the rear to the already mounted strap with M 10x30 bolts (C).
6. In addition fix the skid plate's wings with M 8x20 bolts (E).
7. Tighten all screw joints.

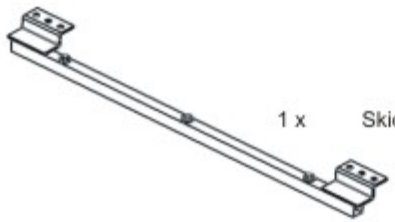

1 x Skid plate's front part

4 x M 8x20
4 x M 8x30
2 x M 10x30
3 x M 10x40

8 x 8
5 x 10

2 x Wing

2 x 65x20x20 -Sd3003