Volvo 850 / V70 / S70 (skid plate for radiator)

Body:

VIN:-

TYPE :25.055

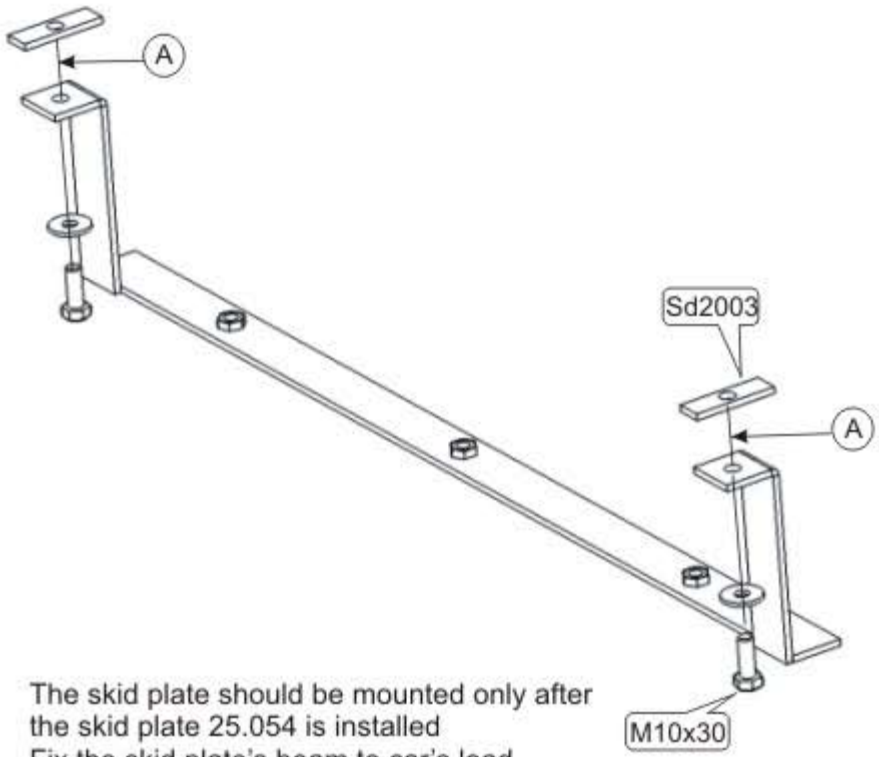

1. The skid plate should be mounted only after the skid plate 25.054 is installed
2. Fix the skid plate's beam to car's load bearing elements with bolts M 10x30 and straps SD2003 -(A).
3. Fix the skid plate to mounted beam with bolts M 10x20 -(B) and to already mounted skid plate for engine bay with bolts M 10x20-(C).
4. Tighten all screw joints.

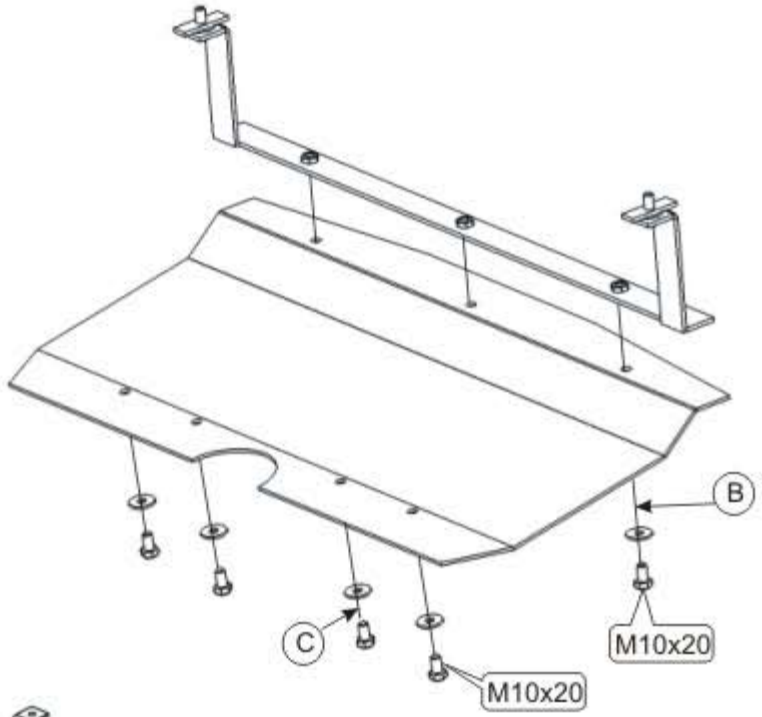

1 x Beam

7 x M 10x20
2 x M 10x30

9 x 10

2 x 65x20x32 -SD2003